



MANUFACTURER OF
DECORATIVE PRIVACY WINDOW FILMS

THIS FILM MAY TAKE UP TO FOUR (4) WEEKS TO CURE ON THE GLASS.




The water-based adhesive in the enclosed film may absorb some of the mounting solution during installation. It is normal for this newly installed film to have a hazy white appearance or white blotches, and is not indicative of a problem with the film or the adhesive. The white marks will disappear once the adhesive completely dries and the film is cured on the glass. If you have questions or concerns, please send a picture and a short description of your concern, along with your order number, to our customer support team at info@decorativefilm.com.

VIEW THE WATER-BASED ADHESIVE COLLECTION AT WWW.DECORATIVEFILM.COM/INSTALLATION-INSTRUCTIONS OR SCAN THE QR CODE.

Before you get started ...

MAKE A WORKSPACE

You will need enough flat surface to lay out the film for measuring, cutting, marking and prep. Do not run a fan near the film or glass surface during installation. This can cause dust and debris to blow onto your film and become trapped.

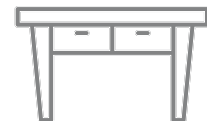

MAKE A WETTING SOLUTION

Wetting solution is the secret ingredient to a smooth, seamless installation. Make a solution by adding 8-10 drops* of a mild, non-moisturizing dish detergent (Dawn or Joy; do not use hand soap) to a 32-oz. spray bottle filled with clean water. Adjust ratio for smaller or larger bottles. Mix well.



*For Static Cling films, use half the amount of soap (4-5 drops).

MAKE SURE IT'S SMOOTH

To ensure the surface is completely clean and smooth before installation, spray the glass with the soapy water mixture and drag a single-edge razor across the surface. If you hear a clicking sound, there is something on the surface that will prevent full adhesion. Use a glass-safe scrub pad to remove the debris.



1

MEASURE, CUT AND CLEAN

Measure the glass surface and cut the film leaving an extra ½ inch to 1 inch around all sides. Excess film is trimmed once installed. Clean the glass surface thoroughly to remove dust, grime, and grease using low-lint towels.



2

PEEL AND PREP

To apply the film, lay it flat with liner facing up. Peel liner back while wetting the film. Use tape to separate if needed. For large pieces, use two people. Rinse and wet fingers before handling to avoid fingerprints.



3

GET IT WET

Spray and soak both the glass surface and the back of the film generously with the water mixture. More water is better, and there is no such thing as too much water. Using water makes it easier to apply and adjust the film before squeegeeing, and any extra water evaporates once the film adheres properly.



4

APPLY AND SMOOTH


Pick up the film by the top corners. Place it onto the wet surface, and move it as needed. Wet the outside of the film, then use a squeegee to smooth it out from the center moving outwards while pushing excess water and bubbles out.



5

TRIM AND FINISH

To install the film correctly, ensure it's flat and smooth. Use the included hard card and razor to remove bubbles and trim excess film in one motion. Finally, use the hard card wrapped in a towel to remove any remaining bubbles and water. It takes a few days for the film to dry and cling to the surface.

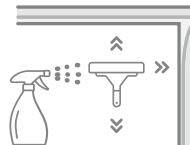

6

REMOVE AND STORE: STATIC CLING

Static cling films can be easily removed without damaging the film or the glass surface. If you plan to reuse your film again (e.g. for holiday-themed films), make sure to save your packing materials and store clean, dry film rolled up until the next application.

